


Quick Guide

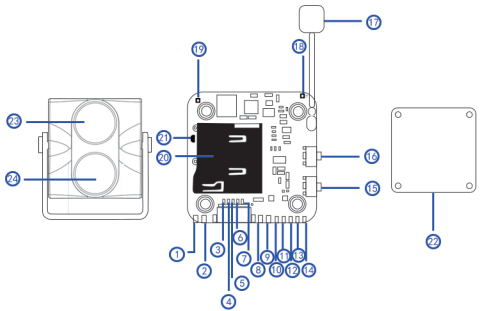

(1)BATTERY(4.2V)	(2)GND	(3)5-12V	(4)GND
(5)VIDEO	(6)MENU	(7)AGND	(8)5-12V
(9)GND	(10)VIDEO	(11)MENU	(12)AGND
(13)RX	(14)TX	(15)WIFI/RECODE	(16)POWER/MODE
(17)ANTENNA	(18)MODE LED	(19)WIFI LED	(20)TF CARD
(21)USB	(22)HEAT SINK	(23)4K LENS	(24)FPV LENS


FUNCTION DESCRIPTION

The button (as position ⑮.) is for WIFI and Recording mode, generally (not in WIFI mode) short press to start/stop recording; long press (about 5-8s) to activate WIFI mode, then short press will turn off WIFI mode.

The button (as position ⑯.): long press (about 5-8s) to turn on/off the camera, short press to switch the video resolution(red LED: 4K/30fps; green LED: 2.7K/60fps, 2.7K/30fps; Blue LED: 1080P/90fps, 1080P/60fps, 1080P/30fps)

NOTE BEFORE USE

- 1.Pls use high-speed TF card with minimum speed of U3 class because the camera has high bit rate, otherwise TF card may not be detected.
- 2.The heat sink is used to fix the flat cable and dissipate heat, which cannot be removed
- 3.Both AGND and GND must be connected to the GND of FC at the same time, or you may experience image interference (Please note direct short circuit is not necessary)
- 4.The flat cable connected in between camera and DVR cannot be folded, or it may cause no image.
- 5.Data save when power cut suddenly: please power on after any improper power cut, so that the last data will be saved automatically.

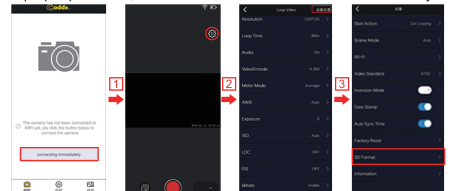

INSTRUCTIONS

- Step 1:Format the TF card
 - a.format the TF card into FAT32 (64k)
 - b.Insert the TF card into the slot on DVR, then format by selecting in setting menu of APP.
- Step 2:Connect the camera to power, there are 4 available ways to supply power (power input must be within DC 5-12V):
 - a.connect by the socket (as position ③.④.⑤.⑫. shown on the picture)
 - b.connect by the bonding pad (as the position ⑧.⑨.⑩.⑬. shown on the picture)
 - c.USB connection (as the position ⑳. shown on the picture)
 - d.4.2V battery (as the position ①.②. shown on the picture)
- Step 3:The LED will blink when the camera is switched on (If not blink, please check whether the TF card formatted successfully or be full,whether the flat cable be connected well)
- Step 4:Operate on APP to connect.Pls download APP first, you can search the application name 'CADDXFPV' on both Google Play (Android) and APP Store (iOS) to download.