FAT' SHARK

DOMINATOR V3 MODEL FSV1063

USER MANUAL



Revision A 09/10/2015

For more product information, please visit: <u>www.fatshark.com</u> All Rights Reserved

Contents

Product Contents	3
Controls Diagram	4
Headset Operation	5
Controls	5
DVR Operation	5
AV Cable Pinout	6
HDMI input	6
Powering Options	6
ezUHF TX/JR Module	6
Futaba Radio	6
Base Station	6
1800mA Battery Pack	7
Battery Charging	7
Accessories	8
Trinity Head Tracker	8
Receiver Modules (1.3G/2.4G/5.8G)	8
Diopter Lens	9
SpiroNET Circular Polarized Antenna	9
Tiny Telemetry From ImmersionRC	9
Specifications	10
Operational Advice	
Trouble Shooting	12
Warranty	12

Introduction

Congratulations on purchasing Fat Shark Dominator V3 modular WVGA FPV video goggle with analog recording DVR, and HDMI support up to 720p. To ensure your continued enjoyment, please take the time to read through this operating manual thoroughly before using.

Product Compatibility

The DominatorV3 has been designed to adhere to established video standards and is compatible with any product also adhering to accepted video standards. Due to the high number of different manufacturers and variation in quality, it's impossible to for us to have tested with every product combination and some troubleshooting may be required if mix/matching components. The DominatorV3 has been thoroughly tested with ImmersionRC gear. For best results and no compatibility issues, Fat Shark recommends ImmersionRC gear for your accessory products.

Fat Shark only guarantees video compatibility with NexwaveRF brand modules.

IMPORTANT!!!! Product Warning!!!!! DO NOT LEAVE HEADSET EXPOSED TO DIRECT SUNLIGHT. SUNLIGHT WILL MAGNIFY THROUGH THE OPTICS AND BURN HOLES IN THE LCD COLOR FILTER (appears as white open areas). THIS WILL NOT BE COVERED BY WARRANTY. KEEP GOGGLES IN PROTECTIVE CASE WHEN NOT IN USE

Product Contents

Carry Case

DominatorV3 Headset w/ White Faceplate

7.4V, 1800mAh Li-po Battery w/ LED Indicator

Battery Discharge Adapter

AV Cable

Mini to Mini HDMI Cable w/ Adapters

Manual

















Headset Operation

Controls

Brightness/contrast control: pressing left and right increases/decreases display contrast. Press forward/back increases/decreases brightness.

Display mode selection: Goggles will boot up in 2D analog. Vertical press of the contrast/brightness button scrolls through the following modes: Analog 2D/3D/ HDMI 2D/3D. **Channel select**: Pressing channel up/down buttons will cause the channel to incrementally increase/decrease from channels 1 to 8 (see relevant receiver module for channel map). Audio beep on channel change. A long beep sounds on channel top and bottom limits.

Low battery warning: Audio warning if input voltage drops below 6.8V

Volume control: each press of button increments volume up or down.

Head tracker: (refer to documentation included with module purchase)

RX power switch: The RX module power is independently controlled via this switch. If a module is inserted, but desired video source is via the AV cable; the RX module needs to be turned off to avoid image conflict.

DVR control: Connect AV cable to AV out port on right side of headset. Connect recording device to cables and set up as per manufacturer directions.

DVR Operation

Note:

1. SD card MUST be formatted before use to ensure stable recording.

2. DVR is for analog recording only, no HD recording.

3. Do not place alternative files that you want to keep into the DVR. The DVR may not recognize the file space and write over your files. Use dedicated SD card.

Recording:

After powering goggles, turn on DVR by depressing vertically and holding the DVR control button for 1 full second (**long press**).

RED LED should now show solid.

Ensure SD card is inserted and **short press** to start recording (RED LED will slowly FLASH (~2 times/second).

Short press again stops recording (turns to solid RED LED).

Playback

Note: requires turning off external receiver and removing any other AVin sources (to not conflict with menu navigation OSD).

After turning on DVR and in stop record mode (SOLDID RED LED) depress and hold DVR button for 1 second (**long press**) to enter menu.

Menu Navigation

Playback (press right to enter)

Now can see: Preview shot with file number press **up/down** to change file number Press **right** to play **Up/down** controls playback speed/direction **Right press** pause/play **Left press**, back to main menu

Format (press right to enter) Execute (press right)

Pressing left from main menu exits menu

AV Cable Pinout

3.5mm AV Connector: Yellow: Video, White: Audio Left, Red: Audio Right



HDMI input

The HDMI port can be connected to HDMI devices via the HDMI mini port. Recommend to first connect to the HDMI device then apply the power from the battery (allow the HDMI device to initiate using power supplied through the cable by the host device before powering goggles). Disconnect battery when switching between devices to clear the settings.

Note (1): Most HDMI connectivity issues are due to either incorrect monitor settings or faulty HDMI cable. Before assuming the HDMI is defective, try with alternative HDMI sources and alternative cables. HDMI cables may fracture over time at connector flex points.

Note (2): Receiver needs to be powered off in HDMI mode to prevent conflicting signals being sent to the display.

Powering Options

If multiple power sources are supplied at same time (i.e. Futaba radio and head strap battery) the headset will draw power from the highest voltage.

ezUHF TX/JR Module

ImmersionRC's ezUHF transmitter and JR transmitter module can supply power (and head tracking control) to the DominatorV3 goggle via a minDIN cable (included with the ezUHF).

Futaba Radio

The DominatorV3 can be powered off a Futaba radio via the Data Cable. Note: Best to upgrade the Futaba radio to a 3S 2200mAh radio lipo pack for this type of connection as the headset will cause extra drain on the transmitter battery pack. A normal NiMh radio battery will not have sufficient battery life for safe flying.

Base Station

Use the AV cable to connect the video/audio.

AV cable has Y splitter with male and female DC head to share power with the external RX supply (up to 13V). We do not recommend powering the goggles off RC packs without our Safety Shield (see accessories) as RC packs have no current limiting circuitry to prevent fires caused from shorts.

1800mA Battery Pack

The latest Fat Shark 1800mAh pack with a row of stylish blue LED indicators allows you to visually check its remaining capacity (4 levels) to prevent a sudden power/vision lost. It seats securely in the headset strap pocket. The soft silicone battery cable extends out of the top of the pack to avoid contact with head strap. Barrel connector cable features high strand count wire for flexibility and



long life. Wire stress is minimized by the additional rubber gasket around the cable exit. No special charger is needed as balance leads have been added for charging with standard RC chargers or supplying power to anti-fog mini fan on face plate (battery includes discharge lead adapter for advanced chargers).

Note: this battery can still be charged via the barrel connector with the original Fat Shark headset battery charger.

Battery Charging

The 7.4V, 1800mAh lithium polymer battery pack is equipped with a 3 pole balance charger lead that allows the battery to be charged off standard RC battery pack chargers (not included). Follow your charger instructions for setting up for 7.4V,1800mAh Li-po. Some chargers require the discharge cable to be connected. Use the enclosed discharge lead adapter for these types of chargers. Do not exceed 1C charging current.

Note (1): If the charger fails to announce charge complete, but is showing battery voltage at 8.4V, the charge can be considered finished.

Note (2): If battery becomes fully discharged or accidentally shorted, an internal safety circuit will trip. To reset the battery, tap 9V direct to the barrel connector via the discharge adapter cable's banana connector (black = GND, red = 9V). This will instantly reset the battery and it can be recharged as normal.



Connection to Standard RC Chargers

General Lithium Polymer safety and handling instructions:

• NEVER leave a LiPo battery unattended while being charged or discharged.

- ALWAYS monitor the battery and charger during the entire charging process.
- ALWAYS charge LiPo batteries in a fireproof location.

• ALWAYS have a lithium approved "class D type" fire extinguisher available.

• NEVER charge LiPo batteries at currents greater than the "1C" rating of the battery ("C" equals the rated capacity of the battery).

• NEVER continue to charge LiPo batteries if the charger fails to recognize full charge. Overheating or swelling of the LiPo cells is an indication of a problem and the battery should be disconnected from the charger immediately and placed in a fireproof location

 ALWAYS discontinue charging or discharging a LiPo immediately if at any time you see smoke or the battery starting to swell up and leave it in a safe fireproof location for approximately 30 minutes.

Accessories

Trinity Head Tracker





Head Tracker Instalation

Refer to head tracker module manual for up to date and detailed menu setup instructions. For individual radio setup instructions please visit our head tracking support forum at www.FPVlab.com Forum: Sponsors Gate/Fat Shark/Head tracker radio support.

Receiver Modules (1.3G/2.4G/5.8G)



Refer to module manuals for frequency chart.

Note: DominatorV3 only guarantees compatibility with NexwaveRF/RaceBand modules (Fat Shark/ImmersionRC)

Diopter Lens

For near sighted users, diopter lens insert sets are available that include -2, -4 and -6 dpt. Peel off rubber eye cups and insert into slots seated in front of the lens. Replace rubber..



SpiroNET Circular Polarized Antenna

The best performance enhancement for your dollar. SpiroNET circular polarized antennae are manufactured to machine tolerances and final tested with top end RF equipment for the best performing CP antenna on the market.

CP antennae naturally reject multipathing (biggest cause of 5G8 video breakup) and have no mismatch polarization when your aircraft banks – resulting in no rude range losses during acrobatic flight.

Tiny Telemetry From ImmersionRC

Conventional OSDs offer a host of features, some of which you don't need

if you're just flying FPV around your local field or have a small and light FPV plane that can't really carry a full OSD. All you really want in those cases is for your tracking antenna to point at the plane accurately and have GPS positional data along with vital statistics such as battery voltage and current consumption.

TinyTelemetry is a minimal GPS locator that sends EzTelemetry data for the EzAntennaTracker down one of the audio channels on the audio/video transmitter. The EzAntennaTracker will then track the plane and offer battery statistics on its LCD display as well as other telemetry data such as positional info etc.

The new v2.0 EzAntennaTracker will also offer audible warnings for battery voltage and total current consumption.

The Tiny Telemetry plugs into the transmitter's dongle power supply located on the back of the transmitter.





Fat Shark Specifications

Optics:	
FOV (field of view):	30° diagonal
Optics Type:	Plastic optics (binocular 6p direct view optical engine)
Interpupillary Distance (IPD):	59 to 69 mm (adjustable)
Optional Diopter Lens Inserts:	-2, -4, -6 dpt
Display:	800 x 480 WVGA LCD
	NTCS/PAL auto selecting
	Side/Side 3D
	HDMI Support 720p
Audio:	Stereo
User Controls:	Channel Selection
	Volume Control
	Mode Selection (Wired/Wireless)
	Display Control
	DVR Control
Electrical:	HT Control
Power Supply:	7 - 13 V (2S/3S supply) (fan plate to 9V only)
Power Consumption:	390mA wireless/ 230mA direct mode (no RX)
·	(@7.4V nominal)
RF Modules:	Infinite channel support on multiple bands
Head Tracker:	Modular (sold separately)
DVR:	MicroSD support to 32Gb
	6Mbps record rate (MJPG compression, 30 fps, AVI)
	File playback (native recording, no codec support)
	PAL/NTSC continuous scan auto detect/mode change
	Auto save if power removed
Interface:	3.5mm AV in/out port
	Power in port
	3.5mm 3p earphone port
	MiniDIN4 data port (head tracking)
	MicroSD insert slot
	RF modular bay MiniHDMI port
Mechanical:	Ergonomic molded headset w/ adjustable headband
Dimensions:	169.2 x 80 x 45.5 mm
Weight:	152 g
Packaging:	
Size:	212 x 134 x 87 mm

Operational Advice

- For best performance, select a channel that has the least amount of interference. While the transmitter is turned OFF, turn on the video headset and look at the screen as you check each channel. Clear channels will have a consistent static background. Channels with interference will have horizontal static lines.
- Always perform a range test before flying. This includes AV and RC controls. Some RC receivers can be affected by the proximity of other electronic devices particularly the AV TX.
- Try to space out your components as much as possible to avoid interference to your RC control range (keep stuff away from RX)
- Do not use 2.4Ghz AV with 2.4Ghz RC controllers.
- Your 2.4Ghz TX will not affect the RC control of other RC users (however, their controllers will affect your AV reception).
- Be aware of other 2.4Ghz RC users. If they turn their RC radio nearby, they may knock out your image.
- Until experienced, practice flying in a familiar area to avoid becoming disorientated.
- Due to antenna characteristics, there is a "null" in line with antenna direction. You may experience excessive video breakup when flying overhead
- 5.8Ghz signal strength drops off very fast (2.4Ghz is more gradual). If using 5.8Ghz, stay safely within solid AV range.
- For maximum distance it is very important that a clear line of sight exists between the transmitter and the video headset. 2 of the worst causes of interference are human bodies and reinforced concrete.
- Place your TX antenna in open area in a vertical orientation
- **Multipathing** (reflections off buildings/ tall objects) causes signal cancellation and result in broken video. Fly in open areas away from buildings or other tall structures (i.e. barns, hills).
- The headset may become warm to touch during use particularly in the top center region. This is normal. If you are unsure, run the headset for 30 minutes fully powered before flying to ensure normal operation.
- Although you don't require any license to operate this device, you are still legally responsible for operating in a responsible manner.

Trouble Shooting

Observation	Possible Cause/Solution
No image, display is	- No power supplied. Check power connections.
completely dark	
No image, display is glowing	- If using wireless module, turn on RX power on bottom of
dark grey	headset.
3,	- If using AV in cable, check video source.
	- Ensure TX is on and camera connections solid
Lots of interference lines	- Choose a cleaner channel.
(horizontal lines) with 2.4Ghz	- Change to 5.8Ghz AV
receiver	- Check correct frequency antenna is used
Poor image, dark or not	- Adjust display with contrast/brightness button
enough contrast	
Lots of interference lines	Check to see if cause is harmonic interference from 2.4Ghz
(horizontal lines) when using	RC controller (turn radio on/off).
5.8Ghz receiver	 Use CH1 on TX/headset (Ch1 not affected by 2.4Ghz)
	 check correct frequency antenna is used
Head tracker not working	- Ensure module pins are aligned correctly into headset
(no response or beeping)	socket
Short range	- Ensure correct antenna are installed
	- Check for other sources of interference
	- Ensure transmitter has clear LOS to headset. Test in wide
	open area, away from any obstructions
HDMI doesn't work	- 720x480 not supported by host device.
	- Incorrect display settings (when connected to computer,
	make sure output to alternative monitor is selected) - Faulty HDMI cable
	Before concluding the HDMI is faulty, test with alternative
	HDMI source and cables
White dots on LCD display	You were careless and left goggles exposed to sun. Sun
	burnt off LCD color filter.
Lens fogs up	Cooler optical lens are heated by your humid face causing
Lonio rogo up	condensation.
	-Pre warm goggles by wearing on head or storing in warm
	location
	- Power anti-fog mini fan on faceplate from headset battery,
	each time press the button can run 10min long.
Head tracker does not work	- Radio doesn't support selective trainer function
(can enter menu)	- Settings incorrect
	- Trainer switch on RC controller not activated
	- In Pause mode
Head tracker drifts or has	- Operating inside so compass sensor not correct (use
excessive error correction	outside)
(jumpy)	- RC radio interfering with compass sensor (keep RC
	controller antenna away from headset
	- Standing near large metal object (such as a car)

Warranty

The system can be exchanged for a new unit within 7 days for any manufacturing defects if returned in new condition. The video headset will be warranted for repair for 2 years if no signs of excessive use. Buyer will be responsible for shipping costs. If beyond the warranty period we will provide repair services.