



Explore the new world!

FIREFLY 8SE

High End Action camera with touch screen

- Ambarella A12S75
- 2-inch IPS touch screen
- Gyro2.0 Image Stabilization
- WiFi + BT 3.0 Remote control
- SONY IMX117 12 Mega WDR CMOS Sensor

Ver 2.1

Contents

 
Safety Guidelines:	3
Features :	4
.....	4
Performance and Specifications:.....	5
Button Functions.....	6
<i>Video settings</i> :.....	7
<i>Photo settings</i> :.....	9
<i>System Setup settings</i> :.....	10
BT Pair.....	11
How to update firmware:.....	12
Wi-Fi :.....	13
Battery Charging:.....	13
Transferring Files:.....	13
External Microphone:.....	13
Instruction for accessories:	14
Accessories installation instructions(Not in stander package):.....	15

Safety Guidelines:

Please read the instruction manual carefully before using the camera for the first time.

- 1.It's a high-precision product, do not drop or crash it.
- 2.Do not expose the camera to strong magnetic objects, sch as magnets or electrical motors. Avoid exposing the product to strong radio waves. Strong magnetic fields may cause the products breakdown or image/audio damage.
- 3.Never leave the products exposed to high temperatures and direct sunlight.
- 4.Please choose branded microSD that suggested at this manual, to make sure the camera work properly.
- 5.In case of overheating, smoke,or unpleasan smell in the process of charging, unplug your device immediately to prevent fire hazard.
- 6.While charging , keep the product out of children's reach. Power cable may casuse children accidental suffocation or electric shock.
- 7.Use orignal Firfly 8SE's batteries, to make sure the camera work/charge properly.
- 8.Keep the device in cool, dry and dust-free places.
- 9.Please do not throw the product or it's battery to the garbage, find a specific recycling poit for it.

Features :

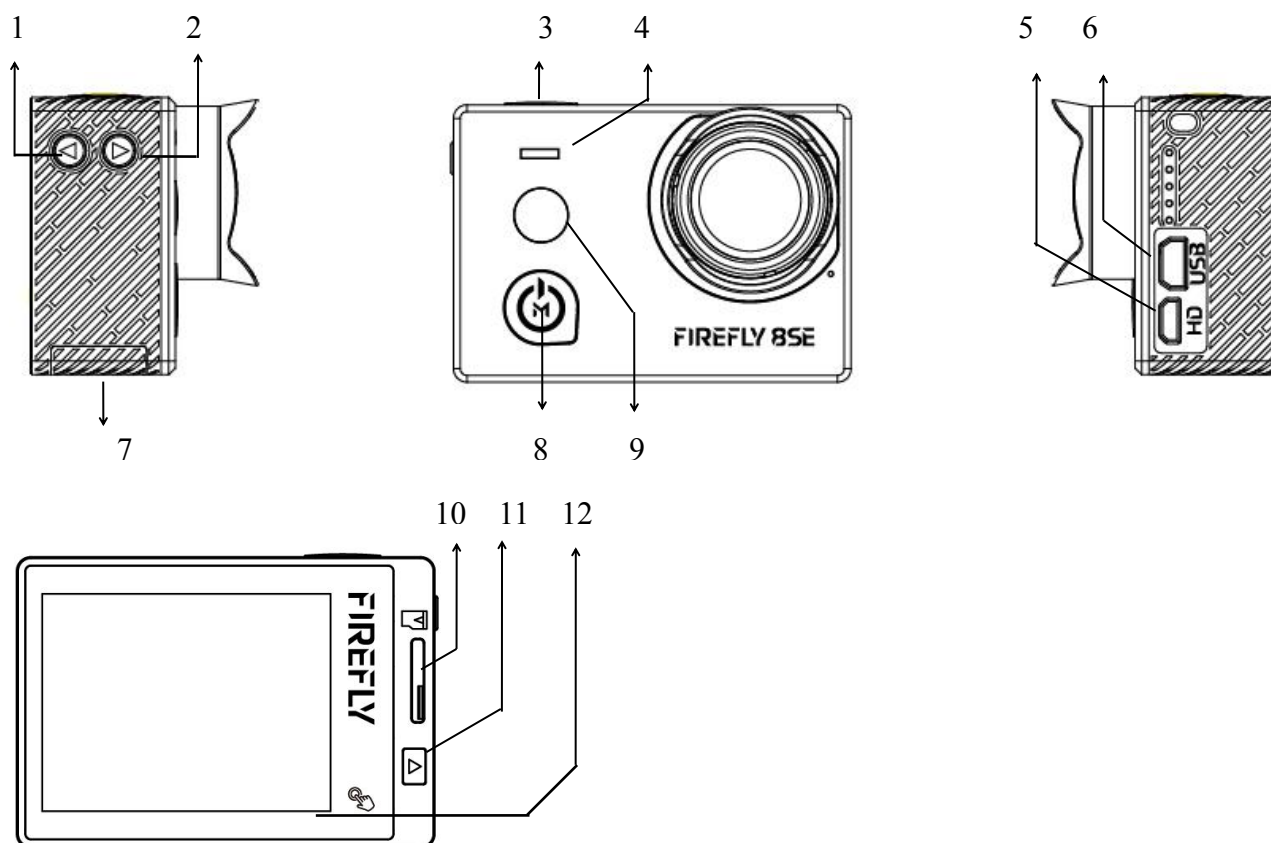

1.UP button.

2.DOWN button.

3.OK button

4.Photo(Green)/Video(Blue) LED.

5.HD output

6.Mini USB.

7.Battery door.

8.Power button/Mode button.

9.Selfie Mirror.

10.MicroSD card slot.

11.Playback button.

12.Touch Screen

Performance and Specifications:



	Photo resolution	16M/14M/12M/8.3M/5M/3M
	AV output format	PAL/NTSC
	USB Port	
	HD Output	YES
	Kind of MicroSD card supported	U3(Note:Low speed sd card will cause unstable)
	Maximum size of MicroSD card supported	128G
	Wi-Fi +BT 3.0 remote control	YES
LCD screen size	2 inch IPS 320*240 with TP	
Specifications	Camera size	59×41×21 MM
	Weight	70g
	Battery Capacity (Battery is detachable)	1200mAH, 3.85V
	Battery life	About 1.33 hours (25°C enviroment)
	Time to complete charging	About 3 hours (5V 1A power supply, and power off while charging)
	Compressed format	H.264
	Video/photo format	*.MP4 / *.JPG
Optical Parameter- Wide angle version	Diaphragm	F/2.8 , 6 glasses
	Angle	Diagonal 170 degrees
Optical Parameter - distortionless version	Diaphragm	F/2.8 , 11 glasses
	Angle	90 degrees
Electric Parameter	Working Voltage	5V
	Power supply	1A

Button Functions

Name	Functions	Descriptions
Power/Mode Button	Turn on/off camera; select modes	Press once, camera ON; press for 3 seconds, camera OFF; press to switch photo /video mode.
OK Button	start/stop recording	Press 2 seconds in playback mode to delete current file <i>Press 2 seconds to unlock.</i>
UP Button	move upwards	move upwards / Shortcut key for screen save
DOWN Button/Menu Button	Move downwards	Enter menu setting/move downwards <u>Press for 3 sec, WIFI ON/OFF</u>
Playback Button	Playback / Switch between System /Normal settings	Press to exit file transfer mode on WiFi

Video settings:

  In video preview mode, touch "setting icon" will enter menu:

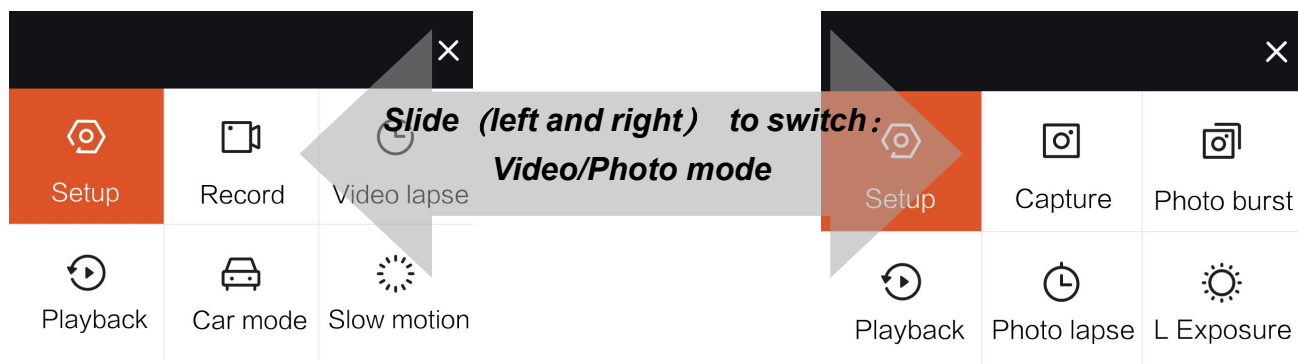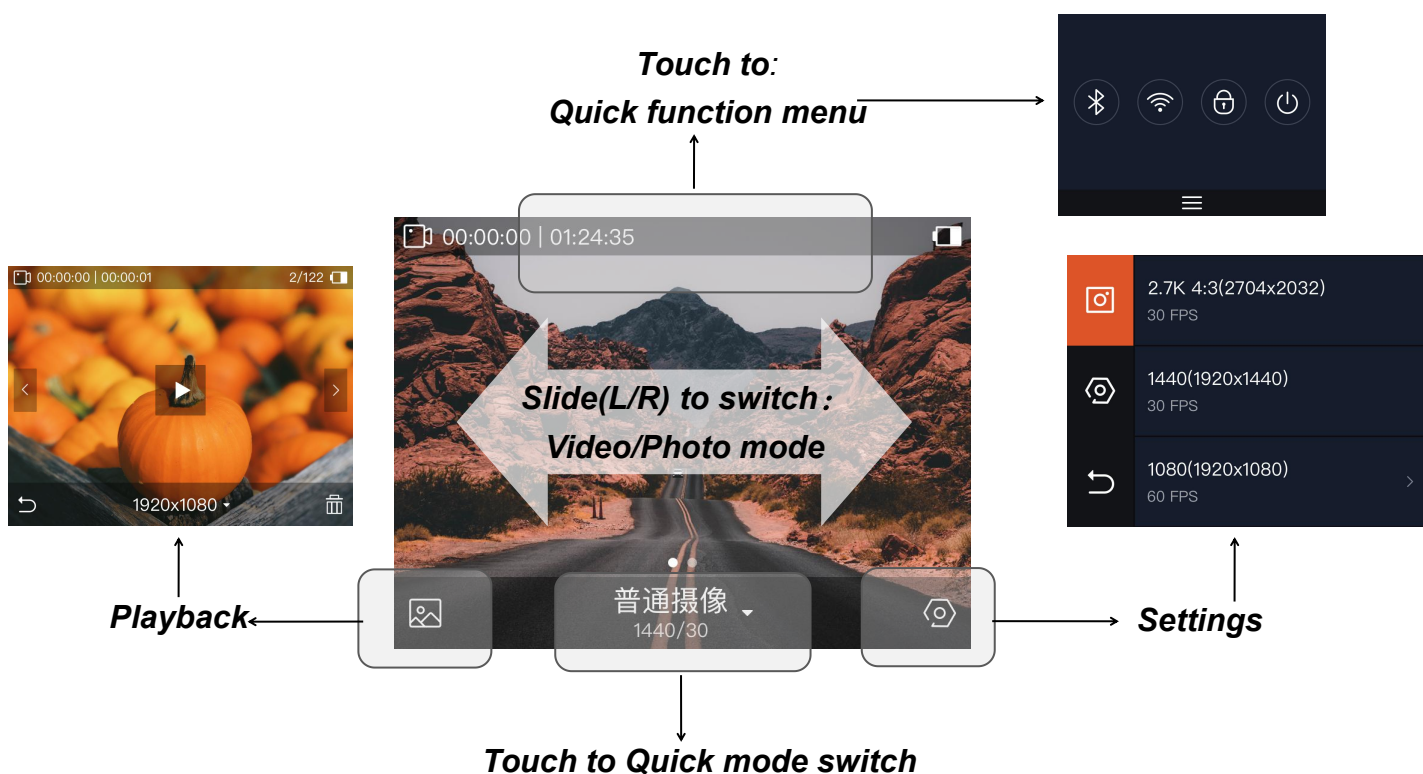

Settings: Touch to enter setting menu.

Record: Touch to enter normal video mode.

Video-lapse: Touch to enter time-laps mode. To adjust time-lapse please refer to “Timelapse Video“ menu.

Playback: Touch to enter Playback mode.

Car Mode: Touch to enter Car mode. In Car mode, Auto DVR and Loop recording will be turned ON.

Slow Motion: Touch to enter Slow motion mode. In this mode, it will record videos in slow motion.

Capture: Touch to enter normal photo mode.

Photo Busrt: Touch to enter Burst photo mode. To adjust it, please refer to “Photo Burst”

Photo-lapse: Touch to enter photo lapse mode. To adjust time-lapse please refer to “Timelapse Photo“ menu.

Long exposure: Touch to enter Long exposure mode. To adjust Long exposure please refer to “Long exposure” menu. **(Use this mode at night).**

Resolution: select from 4K 30fps(16:9), 4K 25fps Super-view, 2160P 30fps(4:3), 2.7K 30fps(4:3), 2.7K 30fps Super-view, 2.7K 30fps(16:9), 2.5K 60fps(16:9), 2.5K 30fps(16:9), 1440P 60fps(4:3), 1440P 30fps(4:3), 1080P 120fps(16:9), 1080P 60fps(16:9), 1080P 30fps(16:9), 1080P 60fps Super-view, 1080P 30fps Super-view, 960P 120fps(4:3), 960P 60fps(4:3), 960P 30fps(4:3), 720P 240fps(16:9), 720P 120fps(16:9), 720P 60fps(16:9), 720P 30fps(16:9), 720P 120fps Super-view, 720P 30fps Super-View ect.

Video Quality: Super.Fine, Fine, Normal.

FOV: Wide/Medium/Narrow, view angle. Not available on 1080P and sView mode.

Auto Low light: Off, On. When turn this function On, camera will drop the **frame rates** to increase the video’s brightness. When this function turn ON, will save power consumption.

Gyro Sensor: Off, On. Available in 1080P 60fps and 1080P 30fps.

Motion detect: Off, Low, Medium, High. When turn this function ON and press OK button, it will record video when motion detected.

Dual files: off, on. When turn on, it will save a low resolution file when recording. Small file is easy to share via WiFi. **We suggest to turn this function on while using APP**

to download/playback videos.

Video stamp: Off,Date,Time,Date/Time. this option allows you to stamp the date/time on the video.

Logo Watermark: Off,On. this option allows you to stamp the cool logo mark on the video.

Video Lapse : to start/stop time-lapse video at 1 / 3 / 5 /10 / 30 /60sec intervals.

Note: this function will make videos look like fast forward.

Loop record: off,1min,2min,3min,5min. If cycle recording mode is selected, the video will be cut into setting-minute segments. The earliest files will be covered when the TF card is full. (This mode is suggested to be used in vehicle monitoring.)

Microphone Volume:off, 50%,60%,70%,80%,90%,100%.

Sharpness : Strong, Normal and Soft.

AWB:Auto White Balance.

Auto,Incandescent,D4000,D5000,Daylight,Cloudy,D9000,D10000,Flash,Fluorescent,Water,Outdoor.

EV Value: -2.0,-1.7,-1.3,-1.0,-0.7,-0.3,0.0,+0.3,+0.7,+1.0,+1.3,+1.7,+2.0.

Metering: Center,Multi,Sopt. **Note: different meter ways will make the footage brightness different.**

Photo settings:

Image size:16M,14M,12M,8.3M,5M,3M (1M=1Mega pixels) .

Photo Quality: Super.Fine,Fine,Normal.

Raw photo: Off / On,when turn on, it will save a raw photo. Please refer to www.cnfpv.com to learn to operate raw photo.

Long exposure: 1/30 second, 1 second,2 seconds,5 seconds, 10 seconds,30seconds, 60 seconds. **Note:If you use long exposure mode at day time,**

photo will be over exposure.

Photo Stamp: Off, Date, Time, Date/Time. When turn this function ON, you could stamp the date time on videos.

Logo Watermark: Off,On. this option allows you to stamp the cool logo mark on the photo.

Self Timer: Off, 2S,3S,5S,10S,30S,60S.

Photo Burst: 3 Pcs/Second, 5Pcs/Second, 10Pcs/Second.

Photo Lapse: 3S,5S,10S,30S,60S.

Sharpness: Strong, Normal,Soft.

AWB(Auto White

Balance) :Auto,Incandescent,D4000,D5000,Daylight,Cloudy,D9000,D10000,Flash,Fluorescent,Water,Outdoor.

EV Value: -2.0,-1.7,-1.3,-1.0,-0.7,-0.3,0.0,+0.3,+0.7,+1.0,+1.3,+1.7,+2.0.

ISO: Auto,100,20,400,800,1600.

Metering: Center,Multi,Spot.**Note: different meter ways will make the footage brightness different.**

System Setup settings:

Quick Capture: Off , On. ON: It will capture videos when power on.

Delay Off: off,5S,10S,20S,30S,60. (available When Auto record turn ON).

TV Mode: NTSC,PAL. PAL, frame rate will be 25/50/100/200; NTSC, frame rate will be 30/60/120/240.

Light Frequency: Auto, 50HZ, 60HZ.

LCD Brightness: Low, Medium, High. Set LCD brightness, **when set it low, the**

power consumption will be saved.

Image Rotate: On/Off, image will rotate 180 degrees (Only available on some resolutions) .

Distortion Correction: On/Off, image distortion will be corrected. (Only available on some resolutions) .**(Note: Only turn it on for 170 degrees version)**

Auto shutdown: Off, 2Min,3Min,5Min,10Min. When there's no operations, the machine will auto shutdown.

Screen Off: Off,30S,1Min,3Min,5Min. When there's no operations,will power off the screen.

Status LED: Off, 1,2,3. Set the action LED light on the machine.

Beep: Off,On. Turn ON/OFF beep voice on the machine.

Time Setup:Set the date time of the machine, or you could update date time with the APP through WiFi.

Date Format:Y/M/D,D/M/Y,M/D/Y.

Language: English, Chinese,Russian.

BT Pair.

How to pair BT remote controller: Set this menu ON, the machine will keep searching BT remote controller. Press any key of the remote controller, and the controller's light will turn on. Keep pressing any key of the remote controller until searching function finished and they will be paired. **Note:** When Camera power ON , it will keep searching BT remote controller for 20 seconds(*If BT auto start is turned ON*), if you keep pressing controller's key (about 5 times), they will be paired automatically. Bluetooth remote controller is not in standard package.

Bluetooth auto-start: ON/OFF. When turn off, boot up will be faster. It's suggested to turn it off to make boot up faster.

WiFi: ON,OFF. Turn Wifi ON/OFF, or you press and hold "Down key" for 2 seconds.

Turn Off WiFi, the power consumption will be saved.

WiFi SSID. You can change WiFi name.

WiFi Password. You could change WiFi passwords here.

Format. Format the MicroSD card.

Default Setting. Set to default settings. **Note: if the camera has any problems, you could use this function.**

Version. Check version number here and could update firmware here.

How to update firmware:

1.

A. Use Firefly APP to update firmware. Please visit Our Youtube channel:

[Hawkeye Firefly Action Camera](#)

2.

a.Delete all the files in MicroSD card , and then copy update file to MicroSD card("FIREFLY_FWUPDATES.bin" , you could download it on our website www.CNfpv.com).

b.Put MicroSD card into camera and power on.

c.Switch to system menu: Version.

d.Press OK button to check the update firmware, if detected firmware is right, select "yes" to update.

e.Once confirmed, camera will update automaticly.

f.It will take 1-2 minutes to update. When update finish, it will power on, and then will reboot..

g.Delete firmware update files.

Wi-Fi :

Please check our website(www.CNfpv.com) or the QR code(below) to find our APP.

Please search:

Apple Store: ***Firefly Cam***

Google Play: ***Hawkeye Firefly***

You can use a Smart phone/tablet to view or take photos and videos via Wi-Fi connection.

1. Download and install app from the app store on your smart phone/tablet, or scan the QR code behind.
2. Turn camera's Wi-Fi on.
3. In your smart phone's or tablet's Wi-Fi network settings, connect to the camera's Wi-Fi network named "FIREFLY_xxxx", enter the password. Default password is "12345678".
4. Open the FIREFLY app on your smart phone/tablet. You will now be able to control the camera with your smart phone/tablet plus view, playback and share selected content.

Battery Charging:

Connect the camera to a computer or phone charger using the included USB cable. Use 1A charger, and turn off the camera when charging will increase the charging rate(**Press and hold Mode key for 3 seconds could shutdown the camera**). The Charging Status Light it will turn OFF when the battery is fully charged.

Transferring Files:

1. Connect the camera to a computer via the included USB cable, and then turn on the camera.
2. Double click "My Computer" and locate "Removable Disk". Enter "Removable Disk" and you will find all photo and video files in AMBA folder.

 
External Microphone:

Please buy our external microphone for FIREFLY 8S. When plug in the microphone, the camera will Beep and the microphone works.


Instruction for accessories:



Accessories installation instructions(Not in stander package):

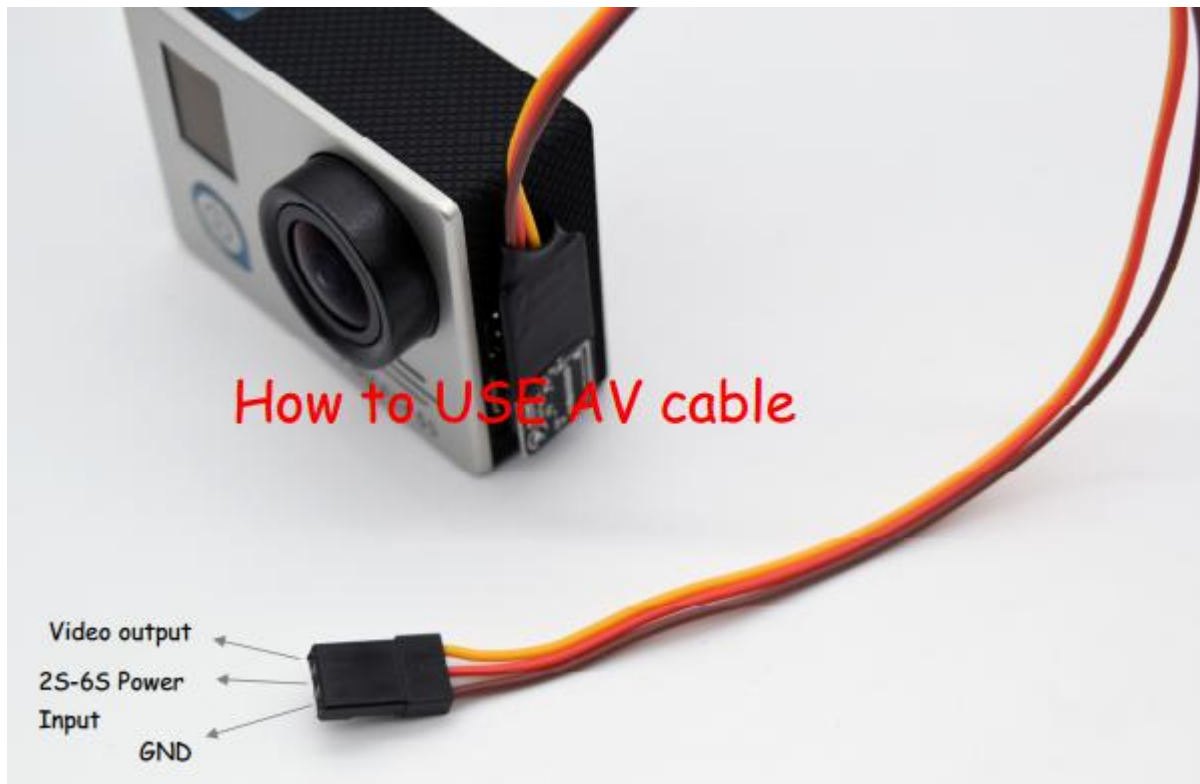

 How to remotely control camera to take photos/record videos

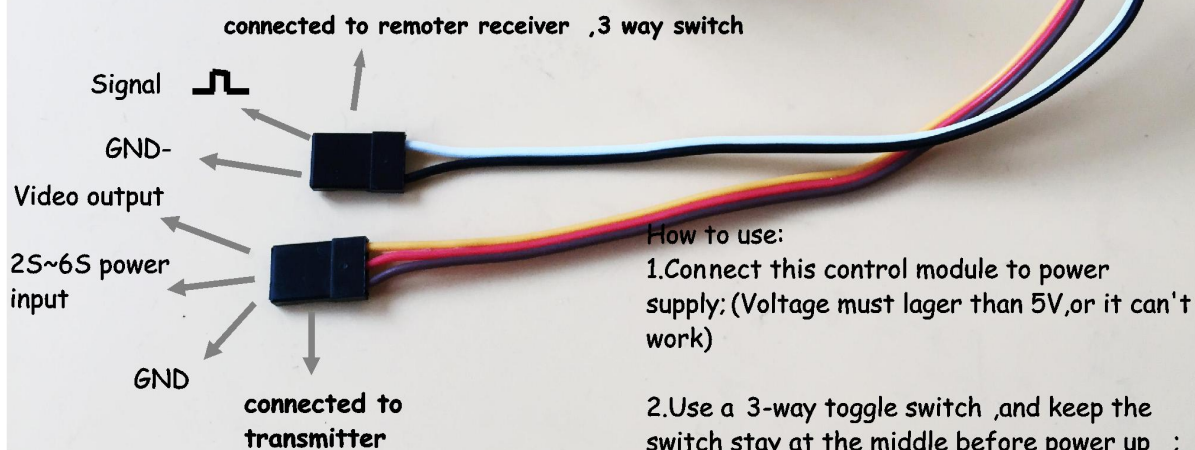

How to use:

1. Connect this control module to power supply; (Voltage must larger than 5V, or it can't work)

2. Use a 3-way toggle switch, and keep the switch stay at the middle before power up ;

3. Power up, Toggle switch up to take one photo; toggle the switch middle and then up again to take another photo.

4. Toggle switch down and stay still to record videos; toggle switch middle to stop recording.

5. Trouble shoot:

- Make sure 3 way switch has output signal.
- let the 3 way switch stay at the middle, and the Camera stay idle; then try again.
- Toggle up, pulse width is : 1ms; middle: 1.5ms; down: 2ms.

Bluetooth remote controller:



Selfie stick:



External Microphone:



Trouble shooting:

1.First of all if the camera has any problems: set it to default settings first (refer to :**System Setup settings**).

1.if the video quality is not satisfied or if the camra have any problems: try to set it to default settings first (refer to :**System Setup settings**).

2.Videos are not smooth: (refer to :**System Setup settings**)

a.Set the video resolution to :**1080P 60FPS**

b.Set Gyro :**ON**

c.Change a player(Quicktime player).

3.Battery endurance time is not enough: a.set LCD Brightness to Low; b.turn off the camera when charging(**Press and hold Mode key for 3 seconds could shutdown the camera**)c.Set to Photo mode when standby.d.Auto low light set ON. d.Turn WiFi OFF.

4.Charging time too long: when charging, press and hold Mode key for 3 seconds to turn the machine power off.

5.Video and sounds are no sync: A.copy the video to computer. B. Change a player(Quicktime).

6.Can't record/Camera unstable/record and then stop: A.Make sure card speed is U3. B. Format MiroSD card(One FIREFLY) once. **Suggest MicroSD cards: Sandisk Extreme U3, Sandisk Extreme Pro U3,Sandisk Extreme PLUS U3,Lexar 1000x U3 , SONY SR-64X U3**

7.Machine is heat. a. Set to Photo Mode when standby. b.take it out of the waterproof case. c.Not Use it in a sealed environment

8.Camera no response. Take battery off and assemble again.

9.For more information please visit our website: www.CNfpv.com/
www.HawkeyeFirefly.com

10.How to use BT remote controller: please refer to Bluetooth pair. **Note: When**

Camera power ON , it will keep searching BT remote controller for 20 seconds(If bluetooth auto start is turn ON), if you keep pressing controller's key (about 5 times), they will be pared automaticly.

11.WiFi playback speed is slow. When you want to use WiFi to playback videos, we suggest to turn "Dual Files" ON. When this function is turned ON, it will save a low resolution file. The files named "xxxxB", we call it B file. When playback via WiFi, play the B file will be much faster.

12.Photos over exposure: Change Metering: Center,Multi,Sopt.

FCC STATEMENT :

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

**Please refer to our website for manual updates: www.CNfpv.com
www.hawkeyefirefly.com**

Please download APP from:

*Apple Store: **Firefly Cam***

*Google Play: **Hawkeye Firefly***

iOS:



Android:



(Dear Sir, please fill and print this paper if you want to send back to us
your hawkeye product.)

Name:

Product Name:

Email address:

Detail address:

Phone number:

What's the problem:

Hawkeye address:

Name: Victor.Koon

Company:HAWK-EYE Aerial Photography Tech Company Limited

Tel: (86)134-243-36270

Addr:Room 15B,15 floor,Nanyuan Fengye Building, No. 1088

Nanshan Road,Nanshan district ,Shenzhen,China.

地址：广东省深圳市南山区南山大道 1088 号南园枫叶大厦 15B

