

Instruction Manual

AC810: 8ch FRSKY ACCST compatible receiver Features:

- 1.) PPM output**
- 2.) compatible with X9D(PLUS) DJT/DFT/DHT**
- 3.) long range :800 meters**
- 4.) weight: 4.9g**
- 5.) Channel number:8ch**
- 6.) size:23mm*30mm**

AC410: 4ch FRSKY ACCST compatible receiver

Features:

- 1.) PPM output**
- 2.) compatible with X9D and X9D PLUS D8 mode and DJT/DFT/DHT**
- 3.) long range :800 meters**
- 4.) weight: 3.4 g**
- 5.) Channel number:4ch**
- 6.) size:16mm*31mm**

Binding :

1. Bind to Frsky X9D: go to page 2 in the transmitter manual and choose D8 in RF mode and choose ch 1- ch8 in channel range. press and hold and button on the receiver, then the blue LED on the receiver will light on, then go to choose the bind mode in the transmitter ,then you will see the blue led on the receiver flash slowly then the binding is finished .Then you can turn on the transmitter again ,power on the receiver ,the blue LED on the receiver will flash slowly and solid on .

2. Binding to XJT/DFT/DJT/DHT module. Please flip the dip switch to D8 mode, then press the bind button on the module ,then press and hold and button on the receiver, then the blue LED on the receiver will light on, then go to choose the bind mode in the transmitter ,then you will see the blue led on the receiver flash slowly. then the binding is finished .Then you can turn on the transmitter again ,power on the receiver ,the blue LED on the receiver will flash slowly and solid on .

For PPM output : connect the ch1 and ch3 directly with the PPM output plug, then AC810 and AC410 channel 4 will output 8channels PPM

Failsafe : Failsafe is only available on channel 3. Failsafe default setting is to reduce throttle.