


# FOXEEER

## LEGEND 2

### 快速入门指南

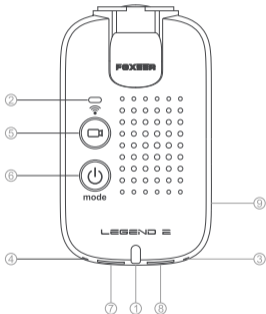

- 1、LED 1
- 2、LED 2
- 3、LED 3

- 4、重启
- 5、快门/WiFi开关
- 6、电源/模式切换

- 7、Micro HDMI
- 8、Micro USB
- 9、microSD 卡槽

## 按键功能说明



### ① 电源/模式切换

- 1、长按3秒，开、关机
- 2、短按：切换摄像、拍照模式

### ② 快门/WiFi开关

- 1、短按：摄像、拍照
- 2、摄像模式待机状态下，长按3秒开启、关闭WiFi

## LED指示说明


- |                    |                     |
|--------------------|---------------------|
| 🔴 LED 1红色 (状态指示灯)  | 🔵 LED 2蓝色 (摄像指示灯)   |
| 长亮：待机状态            | 长亮：摄像模式             |
| 闪烁：工作状态            | 闪烁：正在摄像             |
| 🟡 LED 2黄色 (拍照指示灯)  | 🟢 LED 2绿色 (WiFi指示灯) |
| 长亮：拍照模式            | 闪烁：待连接              |
| 闪烁：正在拍照            | 长亮：已连接              |
| 🔴 LED 2红色 (USB指示灯) | 🟢 LED 3绿色 (充电指示灯)   |
| 长亮：连接电脑            | 充电状态下长亮，充满熄灭        |

## APP下载

请前往Google play, Apple Store 搜索" FOXEEER" ,  
或在官网页面下载<http://www.foxeer.com/download>  
默认WiFi密码: 12345678

# FOXEEER

## LEGEND 2 QUICK START GUIDE

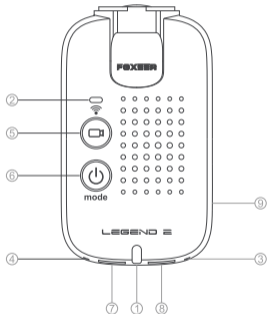

- |         |                       |                     |
|---------|-----------------------|---------------------|
| 1、LED 1 | 4、Reset Button        | 7、Micro HDMI Port   |
| 2、LED 2 | 5、Shutter/WiFi Button | 8、Micro USB Port    |
| 3、LED 3 | 6、Power/Mode Button   | 9、microSD Card Slot |

## Buttons Description



### ① Power/Mode Button

- 1.Press and hold for 3 seconds to turn on/off.
- 2.Short press to switch Video/Photo mode.

### ② Shutter/WiFi Button

- 1.Short press to start/stop recording/photo shooting.
- 2.In recording standby mode, press and hold for 3 seconds to turn on/off WiFi.

## LED Description

- LED 1 Red ( Status )  
Constantly on when standby recording or photo shooting, always blinks with LED 2.
- LED 2 Blue ( Video )  
Constantly on when standby recording, blinks when recording.
- LED 2 Yellow ( Photo )  
Constantly on when being ready for photo shooting, blinks with every shot.
- LED 2 Green ( WiFi )  
Blinks when connecting, constantly on when being connected.
- LED 2 Red ( USB )  
Constantly on when being connected to the PC.
- LED 3 Green ( Charge )  
Constantly on when charging, off when fully charged.

## Android and IOS APP

Search "FOXEEER" on Google play and Apple Store, or download on our website <http://www.foxeer.com/download>  
Default password for WiFi function:12345678